

Before returning this product to the store for any reason, please contact our Parent Service Center at **1-800-533-6708** or **[www.thefirstyears.com](http://www.thefirstyears.com)**. We can provide helpful tips and instructions, and may be able to resolve your problem over the phone or via e-mail.

# swing tray portable booster seat™


## Safety Instructions

### **WARNING:**


Prevent serious injury from falls or sliding out:

- The tray is not a restraint device. **ALWAYS** secure child in 3-point child safety belt.
- **ALWAYS** secure booster seat to chair with chair straps provided.
- **NEVER** leave child unattended and **ALWAYS** keep child in view while in booster.
- **NEVER** use this product as a car seat, bath seat or play chair.
- Not for use on benches, stools, swivel chairs or any chair where chair straps cannot be properly secured. Adult chair must be equal to or larger than the base and seat back of the booster seat.
- **NEVER** use on uneven surfaces.
- Use only for a child that can sit up unassisted.
- **NEVER** adjust height position with child in seat.
- **NEVER** apply excessive force to or allow children to hang from swing tray.
- **ALWAYS** stand in front of the booster seat when placing child in it and attaching 3-point child safety belt. Do not stand to the side or back of the booster seat.
- **NEVER** use without the 3-point child safety belt properly threaded through the slots.
- Not for use with children over 50 lbs.

# Contents

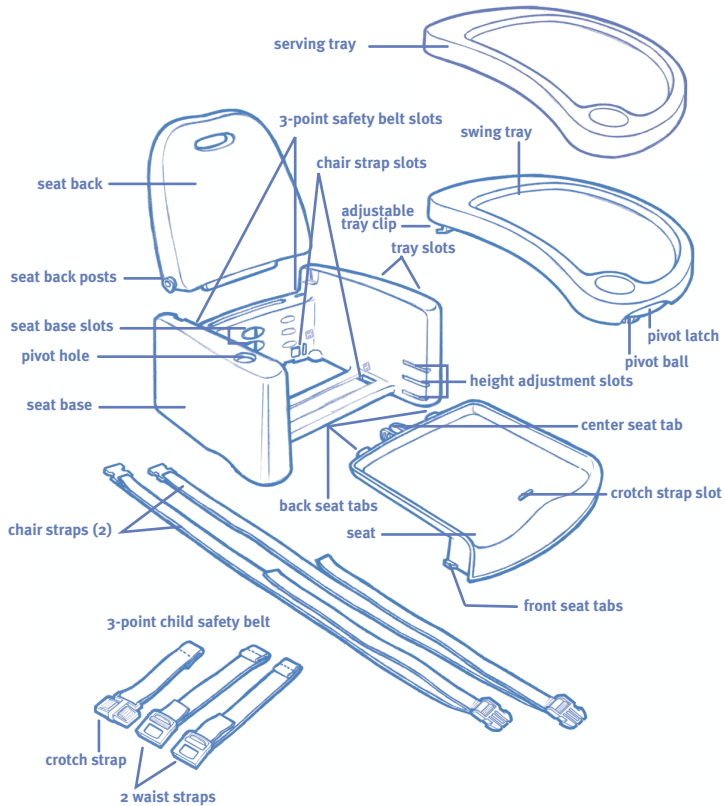


# To Assemble

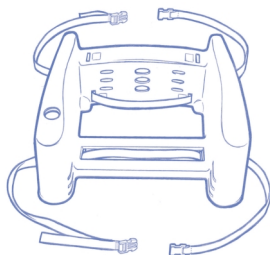


## Chair Straps

Locate slots labeled . Thread the chair straps through the slots on the bottom and back of the seat base as shown.

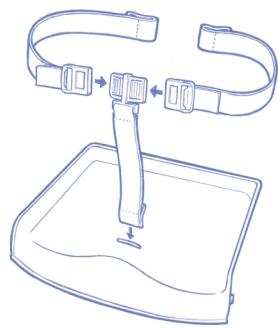

## 3-point Child Safety Belt


1. Locate slot on the underside of the seat labeled . Flatten the anchor seam on the crotch strap of 3-point child safety belt and feed it through the slot in the seat as shown.
3. From the underside of the seat, unfold the anchor seam to open. Pull up on the strap to be sure the anchor seam is firmly in place.
4. Clip both waist straps of the 3-point child safety belt to the crotch strap.

## Seat

To familiarize yourself with proper seat placement, we suggest turning the seat base upside down to install the seat until you get used to the process.

1. Align the front seat tabs with the set of height adjustment slots that is most appropriate for your child.
2. At the same time, align the back and center seat tabs with the set of seat base slots that correspond to the height adjustment slots you've chosen.
3. Then, firmly push the seat into place. All three back seat tabs will stick out through the seat back.

**Important:** Be sure that the seat tabs are aligned with the correct seat base and height adjustment slots to ensure that the seat is level.

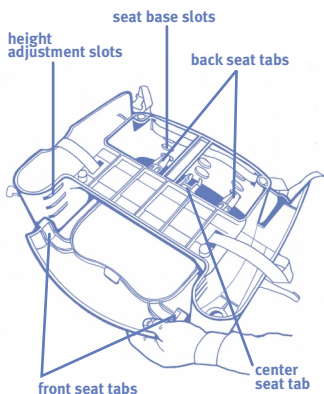


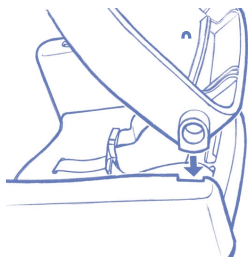
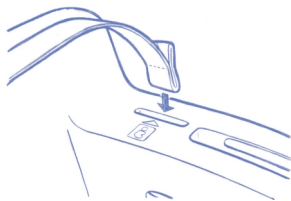
## To Assemble (continued)

### To Adjust Seat Height

Remove the seat by squeezing the center seat tab that sticks out from the seat base and pushing it forward. Pull seat out. Reposition the seat according to the previous instructions. Be sure to listen for the click that indicates seat is locked in place.

### Connect 3-Point Child Safety Belt to Seat Base

1. Thread anchor seams of both waist straps into 2 slots on seat base with .
2. From the underside of the seat, unfold the anchor seam to open. Pull up on the strap to be sure the anchor seam is firmly in place.




 

### Seat Back

**Note:** Before attaching seat back, make sure 3-point child safety straps are laying across seat.

1. Hold seat back at a 45° angle and align posts with slots in seat base.
2. Swivel seat back into upright position until you feel and hear it click into place.

Owner Registration Card • Swing Tray Portable Booster Seat  
Please complete form on reverse side and return within two weeks of purchase to: The First Years, One Kiddie Drive, Avon, MA 02322-1171

# To Assemble (continued)

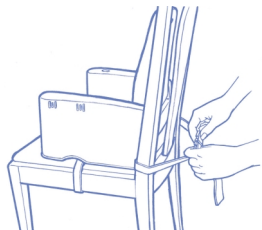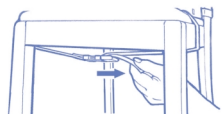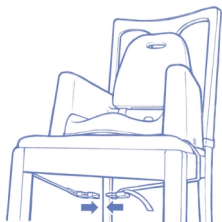

## To Secure Booster Seat to a Chair

**IMPORTANT:** Not for use on benches, stools, swivel chairs or any chair where chair straps cannot be properly secured.

Chair must be equal to or larger than the base of the booster seat.

1. Place the booster seat on a chair that is standing on level flooring.
2. Buckle the first chair strap that's attached to the bottom of the seat base under the seat of your chair and pull on the end of the chair strap to tighten it. Tighten until there is no slack as shown.

**IMPORTANT:** Make sure the chair strap buckle is centered on the bottom of the chair.

3. Buckle the second chair strap around the back of your chair and tighten until there is no slack as shown.

**IMPORTANT:** Make sure the chair strap buckle is centered on the back of the chair.

4. Test the security of the seat.

**Owner Registration Card • Swing Tray Portable Booster Seat** Please complete and return within two weeks of purchase to: The First Years, One Kiddie Drive, Avon, MA 02322-1171

1. Did you purchase or receive this product prior to the birth of your child? Yes... No... If yes, how many months before? \_\_\_\_\_ If no, how old is the child? \_\_\_\_\_  
0-6 mo... 7-12 mo... 13-18 mo... 19-24 mo... Over 24 mo...
2. How satisfied are you initially with the product? Very... Somewhat... Not too... Not at all...
3. What would you change to improve this product?  
\_\_\_\_\_
4. Did you receive this product as a gift? Yes... No...
5. If you made the purchase (or requested this Seat as a gift) which feature(s) were most important in your decision to choose this product? Brand name 1... Grow-with-me features 5... Price 2... Overall appearance 6... Swing Tray feature 3... Overall function 7... Portability 4...
6. What is the name of the store where you purchased the item?  
\_\_\_\_\_
7. Have you purchased any of The First Years products prior to this one? Yes... No...
8. How did you hear about the Swing Tray Portable Booster Seat? Store... Catalog... Friends/Family... Magazine... Other... (please specify) \_\_\_\_\_  
\_\_\_\_\_
9. Would you be willing to participate in a brief telephone satisfaction survey about this product at a later date? Yes... No...  
Name: \_\_\_\_\_  
Address: \_\_\_\_\_

# To Use

## To Place Child In Booster Seat



### **! WARNING:**

Always stand in front of the booster seat when placing child in it and attaching 3-point child safety belt. Do not stand to the side or back of the booster seat.

1. After the booster seat is securely attached to an adult chair, place your child in the booster seat with his legs on either side of the crotch strap.
2. Bring the crotch strap of the 3-point child safety belt up through the child's legs and buckle the child into the booster by securing both waist straps to the crotch strap until you hear a click that indicates the 3-point child safety belt is secure.
3. Adjust the 3-point child safety belt for a snug, comfortable fit.

## To Attach Swing Tray

### **! WARNING:**

Avoid serious injury. ALWAYS use the 3-point child safety belt.

1. Holding the swing tray to the left of the booster seat, align pivot ball with pivot hole and push swing tray down into the pivot hole on seat base until you hear – and feel – it click into place as shown.
2. Swing the tray in front of your child to the opposite seat arm. You'll notice two sets of tray slots on the right side of the seat base. Align the swing tray with the set of tray slots that will be most comfortable for your child and clip the swing tray in place as shown. You will hear – and feel – it click.

**NOTE:** To avoid injury, always check to see where child's fingers are before attaching or adjusting swing tray. Test security of swing tray attachment by gently pulling swing tray forward and up to make sure swing tray is secure.

## To Attach Serving Tray

1. Place serving tray on top of swing tray and push together.

## To Use (continued)

### To Swing Tray to the Side

#### **WARNING:**

**NEVER** apply excessive force to or allow children to hang from swing tray. Tray is designed to release from the seat base if excessive force is applied. If tray releases, simply re-attach tray. (see “To Attach Swing Tray”).

1. Unlatch swing tray by squeezing the adjustable tray clip on the right side of tray with one hand.
2. Gently swing tray away until it reaches its built-in stop point. You will feel it stop in place.

**IMPORTANT:** Do not swing tray past its built-in stop point. Tray is designed to release from the seat base if excessive force is applied or if tray is pushed past its built-in stop point. If tray releases, simply re-attach tray (see “To Attach Swing Tray”).

### To Remove Swing Tray (without swinging)




1. Squeeze adjustable tray clip and pivot latch on both sides of the swing tray. Lift the swing tray up until the clips are released.

### To Remove Serving Tray

1. Peel serving tray up and away from swing tray.

### To Collapse and Carry

1. Unclip both chair straps.
2. Remove the chair strap from the back of the seat and thread it through one of the middle slots in the back of the seat base.
3. Swing tray out of the way.
4. Fold seat back down, flat against seat.
5. Swing tray over folded seat back and clip into place using one of the tray slots.
6. Buckle the bottom chair strap across top of swing tray and the other chair strap around front of booster seat as shown.
7. Use the grip area at the rear of the seat base to carry.

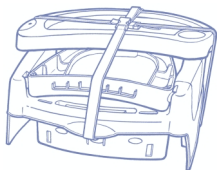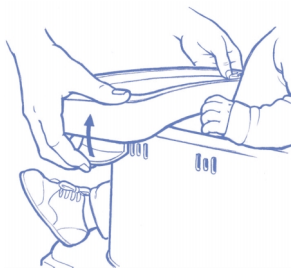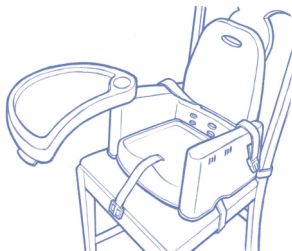

## To Clean

### Disassemble for cleaning

1. Remove seat back from seat base by folding down to 45° angle. Pull seat back away from seat base.
2. Remove seat (see “adjust height” instructions).
3. Remove both chair straps and 3-point child safety belt.

### Dishwasher

This product is 100% dishwasher-safe. Place seat back, seat, seat base, swing tray and serving tray in dishwasher rack. Place both chair straps and 3-point child safety belt in basket or bag and place on top rack. Use normal settings only. Do not use “sani” cycle.

### Hand Washing

Or wash all parts in warm water using mild liquid soap. Rinse thoroughly with clear water. Wipe dry.

## Service

**If you have questions about your Swing Tray Portable Booster Seat**, please call The First Years at: 1-800-533-6708.

If the Swing Tray Portable Booster Seat needs repair, you will be requested to pack it carefully and send it to:

The First Years/Service Department  
One Kiddie Drive, Avon, MA 02322-1171

Visit us at [www.thefirstyears.com](http://www.thefirstyears.com)

©2004 The First Years, Inc., Avon, MA 02322-1171

**Made in the U.S.A.** to The First Years quality specifications. **3368/1160.9.16.04**